



YILMAZ REDÜKTÖR AŞ
Atatürk Mh. Lozan Cd. No:17,
34522 Esenyurt/Istanbul – Türkiye

Tel: +90 212 886 90 00
e-Mail: otomasyon@yr.com.tr

YP65, IP65 Series User's Manual

1. Preface

Thank you for choosing H5000BF Series of high-performance, IP65 inverter. Diagram of the operating instructions, is to facilitate the description, may be slightly different with the product.

Please note that this manual will be handed the hands of end users, and retain for future maintenance, use and if in doubt, please contact with our company or agent of the Company to get in touch, we will be happy to serve you.

2. Nameplate Description

MODEL: NZS0015T2B-Y

INPUT: 1PH 220V 50Hz/60Hz

OUTPUT: 3PH 220V 7.0A 150% 60S


FREQ RANGE: 0.1-400Hz 1.5KW



1105080001-3051

Made in China

Model: NZS - 0015 - T2 - B - Y

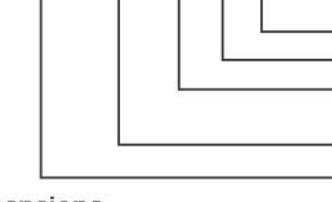

Yilmaz Redüktör Special Version

Constant torque


Voltage range: T2:1PH AC/220V input

T4:3PH AC/380V input

Inverter Capacity:0015:1.5kW

NZS Series


3. Dimensions

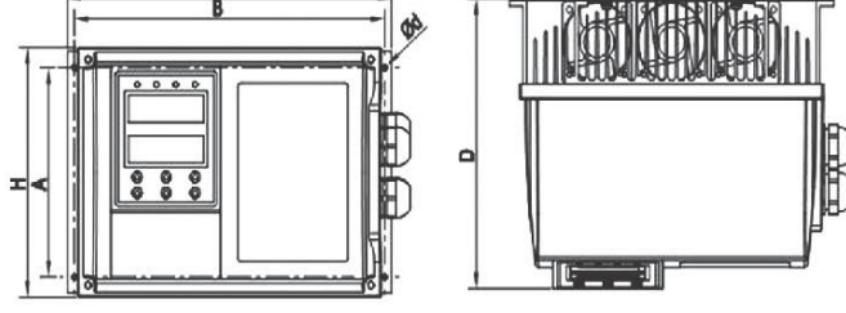


Unit: mm

Model	W	H	D	A	B	Ød
NZS0007T2B-Y	188	122	134	105	178	M4
NZS0015T2B-Y	188	122	134	105	178	M4
NZS0022T2B-Y	188	122	134	105	178	M4
NZS0007T4B-Y	235	154	179	129	225	M4
NZS0015T4B-Y	235	154	179	129	225	M4
NZS0022T4B-Y	235	154	179	129	225	M4
NZS0037T4B-Y	300	236	204	225	250	M7
NZS0055T4B-Y	300	236	204	225	250	M7
NZS0075T4B-Y	300	236	204	225	250	M7
NZS0110T4B-Y	300	236	204	225	250	M7
NZS0150T4B-Y	300	236	204	225	250	M7
NZS0180T4B-Y	300	236	204	225	250	M7
NZS0220T4B-Y	300	236	204	225	250	M7
NZS0300T4B-Y	300	236	204	225	250	M7

4. Keyboard Description

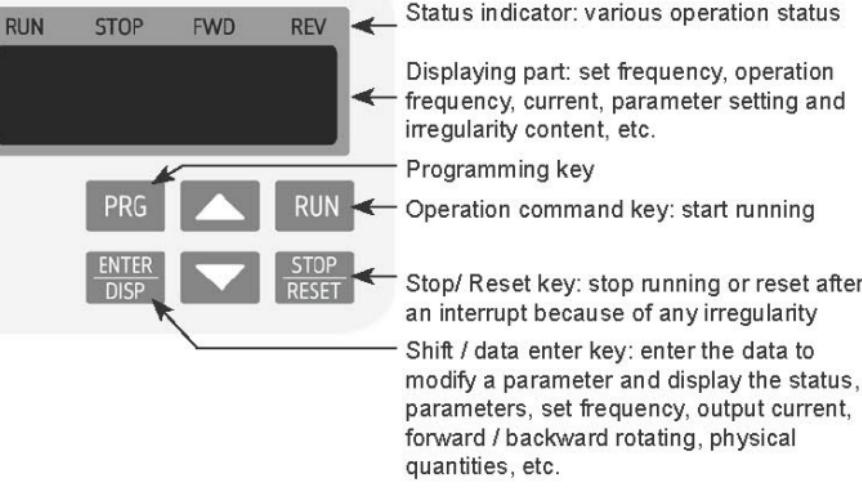

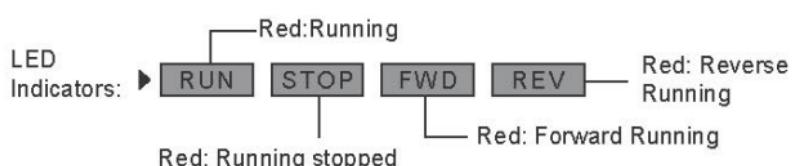



5. Product Specifications

	Items	YP65
Power Supply	Rated voltage, Frequency Voltage Range	1PH/3PH AC 220V 50/60Hz; 3PH AC380V 50/60Hz 220V: 170V~240V; 380V: 330V~440V
Output	Voltage Range Frequency Range	220V: 0~220V; 380V: 0~380V 0.10~400.00Hz
	Control method	V/F control, Space vector control.
	Indication	Operating status/Alarm definition/interactive guidance: eg, frequency setting, the output frequency/current, DC bus voltage, the temperature and so on.
Control Specifications	Output Frequency Range	0.10Hz~400.00Hz
	Frequency Setting Resolution	Digital input : 0.1 Hz, analog input: 0.1% of maximum output frequency
	Output Frequency Accuracy	0.1Hz
	V/F Control	Setting V/F curve to satisfy various load requirements.
	Torque Control	Auto increase: auto raise torque by loading condition; Manual increase: enable to set 0.0~20.0% of raising torque.
	Multifunctional Input Terminal	Four multi-function input terminals, realizing functions including fifteen section speed control, program running, four-section acceleration/deceleration speed switch, UP/DOWN function and emergency stop and other functions
	Multifunctional Output Terminal	1 multi-function output terminals for displaying of running, zerospeed, counter, external abnormality, program operation and other information and warnings.
	Acceleration/deceleration Time Setting	0~999.9s acceleration/deceleration time can be set individually.
Other Functions	PID Control	Built-in PID control
	RS485	Standard RS485 communication function (MODBUS)
	Frequency Setting	Analog input:0 to 10V, 4 to 20mA can be selected; Digital input: Input using the setting dial of the operation panel or RS485 or UP/DOWN. Note: AVI terminals can be used to select an analog voltage input (0-10V) and analog current input (4-20mA) through the switch J2.
	Multi-speed	Four multifunction input terminals, 15 section speed can be set
	Automatic voltage regulation	Automatic voltage regulation function can be selected
Protection/Warning Function	Counter	Built-in 2 group of counters
	Overload	150%, 60second (Constant torque)
	Over Voltage	Over voltage protection can be set.
	Under Voltage	Under voltage protection can be set.
	Other Protections	Output shortcircuit, over current, and parameter lock and so on.
Environment	Ambient Temperature	-10°C to 40°C (non-freezing)
	Ambient Humidity	Max. 95% (non-condensing)
	Altitude	Lower than 1000m
	Vibration	Max. 0.5G
Structure	Cooling Mode	Forced air cooling (5.5kW or more)
	Protective Structure	IP65

6. Wiring

(1) 0.75--2.2kW

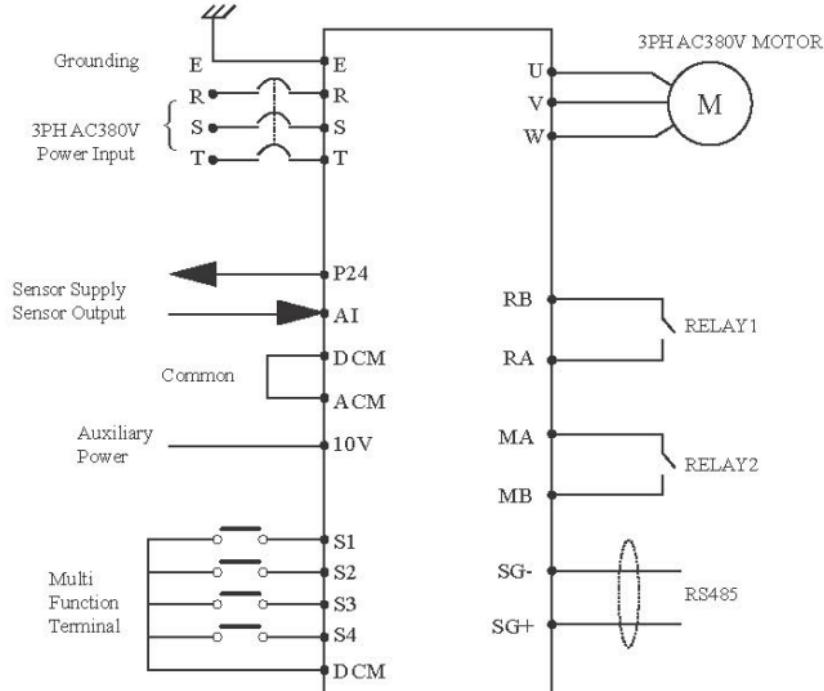

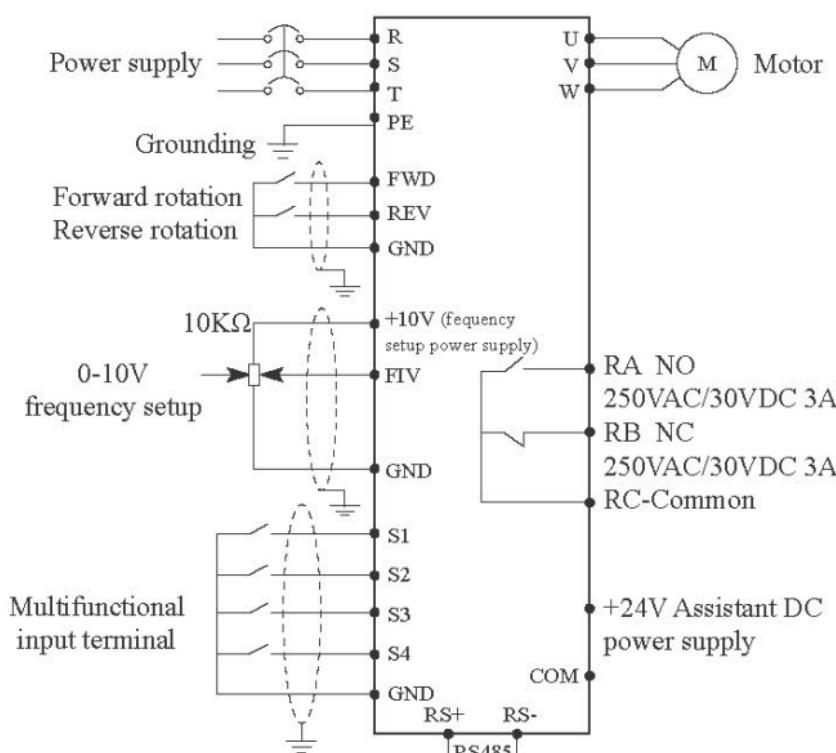

Note: AI/FIV terminals can be used to select an analog voltage input (0-10V) and analog current input (4-20mA) through the switch SW1.

7. Parameters

Function	Parameters	Name	Setting Range	Minimum Setting Increments	Initial value
Monitor functions	P000	Main display data selection	0-32	1	1
	P001	Display the set frequency	Read only	----	----
	P002	Display the output frequency	Read only	----	----
	P003	Display the output current	Read only	----	----
	P004	Display the motor speed	Read only	----	----
	P005	Display the DC bus voltage value	Read only	----	----
	P006	Display the temperature of inverter	Read only	----	----
	P007	Display PID	Read only	----	----
	P010	Alarm record 1	Read only	----	----
	P011	Alarm record 2	Read only	----	----
	P012	Alarm record 3	Read only	----	----
	P013	Alarm record 4	Read only	----	----
	P014	The frequency setting in the last alarm	Read only	----	----
	P015	The output frequency in last alarm	Read only	----	----
	P016	The output current in last alarm	Read only	----	----
	P017	The output voltage in last alarm	Read only	----	----
	P018	The output DC bus voltage in last alarm	Read only	----	----
Basic functions	P100	Digital frequency setting	0.00—Maximum frequency	0.1	0.0
	P101	Frequency setting selection	0: Digital frequency setting (P100) 1: Analog voltage (0—10VDC) 2: Analog current(0—20mA) 3. Setting dial (Operation panel) 4 UP/DOWN frequency setting 5: RS485 communication frequency setting	1	3
	P102	Start signal selection	0: Operation panel (FWD/REV/STOP) 1: I/O terminal 2: Communication (RS485)	1	0
	P103	“stop” key lock operation selection	0: “Stop” key lock mode invalid 1: “Stop” key lock mode valid	1	1
	P104	Reverse rotation prevention selection	0: Reverse rotation disallowed 1: Reverse rotation allowed	1	1
	P105	Maximum frequency	Minimum frequency~400.00Hz	0.1	50.0
	P106	Minimum frequency	0.00~maximum frequency	0.1	0.00
	P107	Acceleration time 1	0~999.9s	0.1	Depends on models
	P108	Deceleration time 1	0~999.9s	0.1	

Function	Parameters	Name	Setting Range	Minimum Setting increments	Initial value
Basic functions	P109	V/F maximum voltage	V/F intermediate voltage ~ 500.0V	0.1	Depends on models
	P110	V/F base frequency	V/F intermediate frequency ~ max. frequency	0.1	50.00
	P111	V/F intermediate voltage	V/F minimum voltage ~ V/F maximum voltage	0.1	Changing
	P112	V/F intermediate frequency	V/F minimum frequency ~ V/F base frequency	0.01	2.50
	P113	V/F minimum voltage	0~V/F intermediate voltage	0.1	15.0
	P114	V/F minimum frequency	0~V/F intermediate frequency	0.1	1.25
	P115	Carrier frequency	1.0K-15.0K	0.1	Changing
	P116	Automatic carrier line up	Reserved	1	0
	P117	Initialization of parameters	8: Initialization of Factory Setting	1	0
	P118	Parameter lock	0: Unlock parameters 1: Lock up parameters	1	0
	P200	Start mode selection	0: regular start 1: restart after inspection	1	0
	P201	Stop mode selection	0: deceleration to a stop 1: coasting	1	0
	P202	Starting frequency	0.10~10.00Hz	0.01	0.5
	P203	Stopping frequency	0.10~10.00Hz	0.01	0.5
	P204	DC injection brake operation current (start)	0~150% rated motor current	1%	100%
	P205	DC injection brake operation time (start)	0~25.0S	0.1	0
	P206	DC injection brake operation current (stop)	0~150% rated motor current	1%	100%
	P207	DC injection brake operation time (stop)	0~25.0S	0.1	0
	P208	Torque boost	0~20.0%	1	0%
	P209	Rated motor voltage	0~500.0V	0.1	Changing
	P210	Rated motor current	0~current of system	0.1	Changing
	P211	No load current ratio of motor	0~100%	0.1	40%
	P212	Rated motor rotation speed	0~6000r/min	1	1420
	P213	Number of motor poles	0~20	2	4
	P214	Rated motor slip	0~10.00Hz	0.1	2.50
	P215	Rated motor frequency	0~400.00Hz	0.1	50.00
	P216	Resistance of stator	0~100Ω	0.1	0
	P217	Resistance of rotor	0~100Ω	0.1	0
	P218	Self inductance of rotor	0~1.000H	0.1	0
	P219	Mutual inductance of rotor	0~1.000H	0.1	0
I/O functions	P300	FIV/AI minimum voltage input	0~AV maximum voltage	0.1	0
	P301	FIV/AI maximum voltage input	AV minimum voltage~10V	0.1	10.0
	P302	FIV/AI input filter time	0~25.0S	0.1	1.0
	P303	FIV/AI minimum current input	0~AI maximum current	0.1	4.0
	P304	FIV/AI maximum current input	AI minimum current input~20mA	0.1	20.0
	P305	FIV/AI input filter time	0~25.0S	0.1	2.5
	P306	Reserved	0~FOV maximum voltage	0.1	0
	P307	Reserved	FOV maximum voltage output~10V	0.1	10.0
	P310	Frequency of low analog	0~600.00	0.1	0.00
	P311	Direction of low analog	0/1	1	0
	P312	Frequency of high analog	0~600.00	0.1	50.00
	P313	Direction of high analog	0/1	1	0
	P314	Analog input reverse selection	0/1	1	0
	P315	Input terminal FWD (0~32)	0: Invalid 1: Jog 2: Jog Forward 3: Jog reverse 4: Forward/ reverse 5: Run 6: Forward 7: Reverse 8: Stop	1	6

Function	I/O parameters	Name	Setting Range	Minimum Setting increments	Initial value
I/O functions	P316	Input terminal REV (0~32)	9: Multi-speed 1 10: Multi-speed 2 11: Multi-speed 3 12: Multi-speed 4 13: Acceleration/Deceleration terminal 1 14: Acceleration/Deceleration terminal 2 15: Frequency increase signal (UP) 16: Frequency decrease signal (DOWN) 17: Emergency stop signal 18: Inverter reset signal 19: PID in running 20: PLC in running 21: Start signal for timer 1 22: Start signal for timer 2 23: Counter pulse signal 24: Counter reset signal 25: Memory clear 26: Start winding operation	1	7
	P317	Input terminal S1 (0~32)		1	18
	P318	Input terminal S2 (0~32)		1	9
	P319	Reserved	18: Inverter reset signal	1	
	P320	Reserved	19: PID in running	1	
	P321 (0~32)	Reserved	20: PLC in running 21: Start signal for timer 1 22: Start signal for timer 2	1	
	P322 (0~32)	Reserved	23: Counter pulse signal 24: Counter reset signal 25: Memory clear 26: Start winding operation	1	
	P323	Reserved	0: Invalid 1: In running 2: Frequency reached 3: Alarm 4: Zero speed 5: Frequency 1 reached 6: Frequency 2 reached 7: Acceleration 8: Deceleration 9: Indication for under voltage 10: Timer 1 reached 11: Timer 2 reached 12: Indication for completion of phase 13: Indication for completion of procedure 14: PID maximum 15: PID minimum 16: 4-20mA disconnection 17: Overload 18: Over torque 26: Winding operation completed 27: Counter reached 28: Intermediate counter reached 29: Water supply by constant voltage “1” turn on “0” turn off	1	
	P324	Reserved	17: Overload 18: Over torque 26: Winding operation completed 27: Counter reached 28: Intermediate counter reached 29: Water supply by constant voltage “1” turn on “0” turn off	1	
	P325	Alarm output terminal RA, RC (0~32)	0: Frequency output 1: current output	1	03
	P326	Reserved	2: DC bus voltage 3: AC voltage	1	
	P327	Reserved	4: Pulse output, 1pulse/Hz 5: 2 pulses/Hz 6: 3 pulses/Hz 7: 6 pulses/Hz	1	
Secondary application	P400	Jog frequency setting	0.00~maximum frequency	0.1	5.00
	P401	Acceleration time 2	0~999.9s	0.1S	10.0
	P402	Deceleration time 2	0~999.9s	0.1S	10.0
	P403	Acceleration time 3	0~999.9s	0.1S	10.0
	P404	Deceleration time 3	0~999.9s	0.1S	10.0
	P405	Acceleration time 4/Jog acceleration time	0~999.9s	0.1S	10.0
	P406	Deceleration time 4/Jog deceleration time	0~999.9s	0.1S	10.0
	P407	Designated value of counter	0~999.9s	1	100
	P408	Intermediate value of counter	0~999.9s	1	50
	P409	Limitation of acceleration torque	0~200%	1%	150%
	P410	Limitation of constant speed torque	0~200%	1%	00
	P411	Over voltage prevention selection in deceleration	0/1	1	1
	P412	Automatic Voltage regulation selection	0~2	1	1
	P413	Automatic-energy-saving selection	0~100%	1%	00
	P414	DC Braking voltage	Depends on models	0.1	Changing
	P415	Braking duty	40~100%	1	50%
	P416	Restart after instant power off	0~1	1	0
	P417	Allowable time of power cut	0~10s	1	5.0S
	P418	Flank restart Current limited level	0~200%	1	150%
	P419	Flank restart time	0~10s	1	10
	P420	Fault restart times	0~5s	1	0
	P421	Delay time for restart after fault	0~100	2	2
	P422	Over torque action	0~3	1	0
	P423	Over torque detection level	0~200%	1	00

Function	Parameters	Name	Setting Range	Minimum Setting increments	Initial value
Secondary application	P424	Over torque detection time	0~20.0S	0.1	00
	P425	Reaching Frequency 1	0.00~maximum frequency	0.1	100
	P426	Reaching Frequency 2	0.00~maximum frequency	0.1	5.0
	P427	Timer 1 setting	0~10.0s	0.1	0
	P428	Timer 2 setting	0~100s	1	0
	P429	Constant-speed torque limiting time	0~999.9s	0.1	Changing
	P430	Width of arrival of frequency in hysteretic loop	0.00~2.00	0.1	0.50
	P431	Jump frequency 1	0.00~maximum frequency	0.1	0
	P432	Jump frequency 2	0.00~maximum frequency	0.1	0
	P433	Jump frequency hysteresis loop width	0.00~2.00	0.1	0.50
	P434	UP/DOWN frequency step	0~10.00Hz	0.1	0.1
	P435	UP/DOWN frequency Memory options	0: memory 1: No Memory	1	0
PLC operation	P500	PLC memory mode	0~1	1	0
	P501	PLC starting mode	0~1	1	0
	P502	PLC running mode	0: PLC stops after running for one cycle 1: PLC stop mode, it stops after running for one cycle 2: PLC cycle running 3: PLC stop mode, cycle running mode 4: PLC operates at the last frequency after running for one cycle.	1	0
	P503	Multi-speed 1	0.00~maximum frequency	0.1	20.0
	P504	Multi-speed 2	0.00~maximum frequency	0.1	10.0
	P505	Multi-speed 3	0.00~maximum frequency	0.1	20.0
	P506	Multi-speed 4	0.00~maximum frequency	0.1	25.0
	P507	Multi-speed 5	0.00~maximum frequency	0.1	30.0
	P508	Multi-speed 6	0.00~maximum frequency	0.1	35.0
	P509	Multi-speed 7	0.00~maximum frequency	0.1	40.0
	P510	Multi-speed 8	0.00~maximum frequency	0.1	45.0
	P511	Multi-speed 9	0.00~maximum frequency	0.1	50.0
	P512	Multi-speed 10	0.00~maximum frequency	0.1	10.0
	P513	Multi-speed 11	0.00~maximum frequency	0.1	10.0
	P514	Multi-speed 12	0.00~maximum frequency	0.1	10.0
	P515	Multi-speed 13	0.00~maximum frequency	0.1	10.0
	P516	Multi-speed 14	0.00~maximum frequency	0.1	10.0
	P517	Multi-speed 15	0.00~maximum frequency	0.1	10.0
	P518	PLC operation time 1	0~9999s	1S	100
	P519	PLC operation time 2	0~9999s	1S	100
	P520	PLC operation time 3	0~9999s	1S	100
	P521	PLC operation time 4	0~9999s	1S	100
	P522	PLC operation time 5	0~9999s	1S	0
	P523	PLC operation time 6	0~9999s	1S	0
	P524	PLC operation time 7	0~9999s	1S	0
	P525	PLC operation time 8	0~9999s	1S	0
	P526	PLC operation time 9	0~9999s	1S	0
	P527	PLC operation time 10	0~9999s	1S	0
	P528	PLC operation time 11	0~9999s	1S	0
	P529	PLC operation time 12	0~9999s	1S	0
	P530	PLC operation time 13	0~9999s	1S	0
	P531	PLC operation time 14	0~9999s	1S	0
	P532	PLC operation time 15	0~9999s	1S	0
	P533	PLC operation direction	0~9999	1	0
PID operation	P600	PID starting mode	0: PID disable 1: PID start 2: PID start by external terminal	1	0
	P601	PID operation mode selection	0: Negative feedback mode 1: Positive feedback mode	1	0
	P602	PID action set point	0: figure mode (P604) 1: AVI (0-10V) 2: AVI (0-20mA)	1	0
	P603	PID feedback value selection	0: AVI (0-10V) 1: AVI (0-20mA) 2: Reserved 3: Reserved	1	0
	P604	PID figure target value setting	0.0~100.0%	0.1%	50%
	P605	PID upper limit alarm value	0~100.0%	1%	100%
	P606	PID lower limit alarm value	0~100.0%	1%	0%
	P607	PID proportional band	0.0~200.0%	0.1%	100%
	P608	PID integral time	0.0~200.0 S.0 means closed	0.1s	0.3s

Function	Parameters	Name	Setting Range	Minimum Setting increments	Initial value
PID operation	P609	PID differential time	0.00.0~20.00 S.0 means closed	0.1s	0.0
	P610	PID action step-length	0.00~1.00Hz	0.1	0.5Hz
	P611	PID standby frequency	0.00~120.0Hz (0.00Hz) 0.00Hz means sleep function is closed	0.1	0.0Hz
	P612	PID standby duration	0~200s	1S	10s
	P613	PID wake-up value	0~100%	1%	0
	P614	PID corresponding value of display	0~9999	1	9999
	P615	PID digit of display	1~5	1	4
	P616	PID decimal digits of display	0~4	1	2
	P617	PID upper limit frequency	0~max. frequency	0.1	48.00
	P618	PID lower limit frequency	0~max. frequency	0.1	20.00
	P619	PID working mode	0: Always work (PID function open) 1: When feedback reaches upper limit (P605), it will work at Min-frequency. When feedback reaches lower limit (P606), PID will begin to work.	1	0
RS485 Communication	P700	Communication speed	0: 4800bps 1: 9600 bps 2: 19200 bps 3: 38400 bps		1
	P701	Communication mode	0: 8N1 FOR ASC 1: 8E1 FPR ASC 2: 8O1 FOR ASC 3: 8N1 FOR RTU 4: 8E1 FOR RTU 5: 8O1 FOR RTU		0
	P702	Communication address	0~240	1	0
Advanced application	P800	Advanced application parameter lock	0: Locked 1: Unlocked	1	1
	P801	System 50Hz/60Hz setting	0~50Hz 1~60Hz	1	1
	P802	Constant torque or variable torque selection	0: Constant torque 1: Variable torque	1	1
	P803	Over-voltage protection setting	changing	0.1	changing
	P804	Under-voltage protection setting	changing	0.1	changing
	P805	Over-temperature protection setting	40~120°C	0.1	85/95°C
	P806	Current display filter time	0~10.0	0.1	2.0
	P807	0-10V analogue output low end calibration coefAIclient	0-9999	1	-
	P808	0-10V analog output high end calibration coefAIclient	0-9999	1	-
	P809	0-20mA analogue output low end calibration coefAIclient	0-9999	1	-
	P810	0-20mA analog output high end calibration coefAIclient	0-9999	1	-
	P811	Compensation frequency point for dead time	0.00~maximum frequency	0.01	0.00
	P812	UP/DOWN frequency Memory options	0: memory 1: No Memory	1	1

8. Troubleshooting

Operation Panel Indication	Name	Possible fault reason	Corrective action
OC0 / UC0	Over current during stop	1: Inverter fault	Please contact your sales representative
OC1/UC1	Over current during acceleration	1: Acceleration time is too short 2: V/F curve is not set correctly 3: Motor or motor wire have short circuit to the ground 4: The torque boost is set too fast 5: The input voltage is too low 6: Directly start up the running motor 7: The inverter setting is not correct 9: The inverter fails	1: Increase acceleration time 2: Correctly set V/F curve. 3: Check the insulation of motor and motor wire. 4: Reduce the value of torque boost. 5: Check input voltage 6: Check the load 7: Set tracing startup 8: Enlarge capacity of inverter 9: Sent for repairing

Operation Panel Indication	Name	Possible fault reason	Corrective action
OC2 / UC2	Over current during deceleration	1: Decelerate time is too short 2: Inverter capacity is inappropriately set 3: Whether there is any disturbing	1: Increase deceleration time 2: Enlarge inverter capacity 3: Solve disturbing resource
OC3 / UC3	Over current during constant speed	1: The insulation of motor and motor wire is not good 2: Load fluctuation 3: Fluctuation of input voltage and the voltage is low 4: Inverter capacity is inappropriately set 5: Whether there is a large power motor starting up and leads the input voltage goes down 6: Whether there is a disturbing resource to disturb inverter	1: Check the insulation of motor and motor wire 2: Check load situation and mechanical lubrication 3: Check input voltage 4: Enlarge the capacity of inverter 5: Increase capacity of transformer 6: Solve disturbing resource
OU0	Over voltage during stop	1: The deceleration time is short 2: Inverter capacity incorrectly set 3: Disturbing	1: Check the power supply voltage 2: Sent for repairing
OU1	Over voltage during acceleration	1: Abnormal power supply 2: Peripheral circuitry is incorrectly set (switch control on or off, etc.) 3: Inverter fault	1: Check the power supply voltage 2: Do not use power supply switch to control the inverter on or off 3: Sent for repairing
OU2	Over voltage during deceleration	1: Power supply voltage abnormal 2: Energy feedback load 3: Braking resistor incorrectly set	1: Check the power supply voltage 2: Install braking unit and resistance 3: Affirm resistance setting again
OU3	Over voltage during constant speed	1: Decelerate time is too short 2: Power supply voltage abnormal 3: Over load 4: Braking resistor incorrectly set 5: Braking parameter is incorrectly set	1: Increase deceleration time 2: Check the power supply voltage 3: Check braking unit and resistance 4: Set Braking resistor over again 5: Correctly set parameter, e.g. braking tube voltage, etc
LU0	Under voltage during stop	1: Power supply voltage abnormal 2: Phase missing	1: Check the power supply voltage 2: Check power supply and switch whether there is phase missing
LU1	Under voltage during acceleration		
LU2	Under voltage during deceleration	1: Power supply voltage abnormal 2: Phase missing 3: There is large load power start up in the input	2: Check whether peripheral setting bad connection leads phase missing 3: Please use independent power supply
LU3	Under voltage during constant speed		
OL0 during stop	Inverter overload	1: Overload 2: Acceleration time is too short 3: Torque boost is too fast 4: V/F curve incorrectly set 5: Under voltage of input 6: Before motor stops, inverter starts up 7: Fluctuation or blocking in loading	1: Reduce the load weight or replace larger capacity inverter 2: Increase acceleration time 3: Reduce torque boost rate 4: Set V/F curve over again 5: Check input voltage, increase inverter capacity 6: Adopt tracing startup mode 7: Check load condition
OL1 during acceleration			
OL2 during deceleration			
OL3 during constant speed			
OT0 during stop	Motor overload	1: The motor for use under overload 2: Acceleration time is too short 3: Motor protection setting is too small 4: V/F curve is incorrectly set 5: Torque boost is too fast 6: Bad motor insulation 7: Motor setting is too small	1: Reduce the load weight. 2: Increase acceleration time 3: Increase protection setting 4: Correctly set V/F curve 5: Reduce torque boost rate 6: Check motor insulation and replace motor 7: Use larger inverter or motor
OT1 during acceleration			
OT2 during deceleration			
OT3 during constant speed			
ES	Emergency stop	1: Inverter is in Emergency stop condition	1: After release Emergency stop, start up as regular procedure
CO	Communication error	1: Communication line connection has problem 2: Communication parameter is incorrectly set 3: Transmission format is wrong	1: Perform wiring of the RS-485 terminals properly 2: Set parameter over again 3: Check data transmission format
20	4-20mA wire broken	1: Terminal is loose; signal input line is bad connected	1: Perform wiring of the 4-20mA terminals properly.
Pr	Parameter write error	Parameter setting is wrong	After stopping operation, make parameter setting.
Err	Wrong parameter group	The parameter does not exist or the factory setting parameter	Quit this parameter

Function Parameters

1. Setting of the main engine Diagram of the opera

Parameter	Code	Name	Instruction Of The Setting Range	Minimum Unit	Value From Factory
PID	P600	Reserved			
	P601	Attached engine OR Main engine	0: Attached engine 1: Main engine	1	0
	P602	PID Target Selection	0:F6.04; 1:A1	1	0
	P603	PID Feedback Value Selection	0:A1 (4-20mA for F3.00=2.0V F3.01=10.0V)	1	0
	P604	The pressure setting of the outlet	0.00-50.00kgf/cm ²	0.01	5.00kg f/cm ²
	F605	The Range of the Pressure display	0.00-50.00kgf/cm ² (10kgf/cm ² =1MPa)	0.01	5.00kg f/cm ²
	F606	Reserved			
	P607	Value from PID to P	0-200	1.0	100.0
	P608	Value from PID to I	0.1-10.0S	0.1	0.3S
	P609	Value from PID to D	0-1.0S	0.1	0.0S
	P610	PID The length of the each step	0-5.0Hz	0.1	2.0Hz
	P611	Frequency for Resting state	0.0-50.0HZ Frequency for Resting state =0; No function of Resting State	0.1	30.0HZ
	P612	Timing for Resting State	0-200S	1	60S
	P613	The value for resting state and awaken	0-100% Percentage	1	60%
	P614	PID timing for awaken	0-200S	1	10S
	P615	Alarm For High Voltage	0.00-50.00kgf/cm ²	0.01	10.00
	P616	Alarm For Low Voltage	0.00-50.00kgf/cm ²	0.01	0.00
	P617	Alarm Time for the High Pressure Of The Outlet	0-600S	1	10S
	P618	Alarm Time for the Low Pressure Of The Outlet	0-600S	1	10S
	P619	Judgment For the Level of Low Water (Sensor is connected to S1-S4)	0.1-60.0S Checking of multi function	0.1	10.0S
	P620	Allow the Tolerance		0.1	0.1
	P630	1 Pump Types		1	1
	P631	2 Pump Types		1	1
	P632	3 Pump Types		1	1
	P633	4 Pump Types		1	1
	P634	5 Pump Types		1	0
	P635	6 Pump Types		1	0
	P640	Frequency of Adding Pump	0- Maximum of the frequency	1%	49.0Hz
	P641	Delay of Adding Pump	0-600.0S	0.1	30.0S
	P642	Frequency of reducing Pump	0- Maximum of the frequency	0.1Hz	30.0Hz
	P643	Delay of Reducing Pump	0-600.0S	0.1S	30.0S
	P644	Ability of Exchanging the Pump	0-No effective; 1-effective;	1	0
	P645	Changing Pump On Timely	1-9999	1	600
	F646	Antifreeze Effectively	0 No effective 1 effective	1	0
	F647	Period for Antifreeze	0-6000	1	10
	F648	Frequency for Antifreeze	0-FMAX	0.1	5.0Hz
	F649	Timing for Antifreeze	0-600	1	3

Parameter	Code	Name	Instruction Of The Setting Range	Minimum Unit	Value From Factory
Input Terminal	P315	S1 Terminal	0. No effective 1-27: According to instruction 29: Low water level	1	6
	P316	S2 Terminal		1	7
	P317	S3 Terminal		1	29
	P318	S4 Terminal		1	0
Analogue Input	P300	Ai The lower limit of the Input	0-P301	0.1	2.0
	P301	Ai The Top limit of the Input	0-10.0	0.1	10.0
	P420	Restart			5
	P421	Using time of the restart			10.0S

setting for attached engine

attached engine		
F1.01	Frequency setting method	5: RS485
F1.02	Set selection	2: RS485



YILMAZ REDÜKTÖR AŞ
 Atatürk Mh. Lozan Cd. No:17,
 34522 Esenyurt/Istanbul – Türkiye

Tel: +90 212 886 90 00
 e-Mail: otomasyon@yr.com.tr